

Znewtech Clock Stand


for Amazon Echo Dot 2nd Gen
Model: ZC-X1

ZNEW
TECH


User's Manual

Getting to Know Clock Stand

Front View

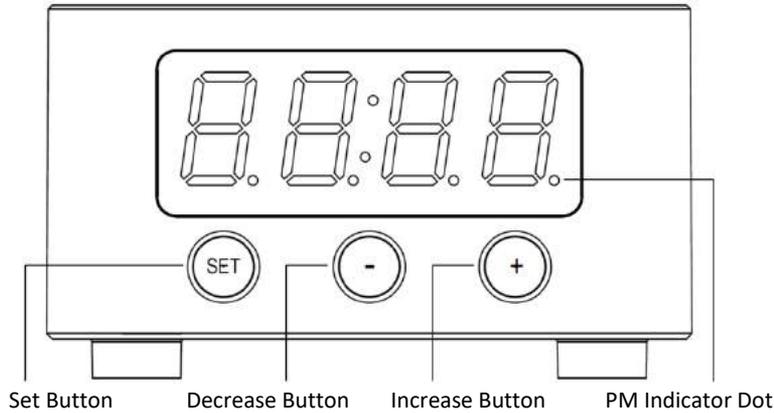


Back View

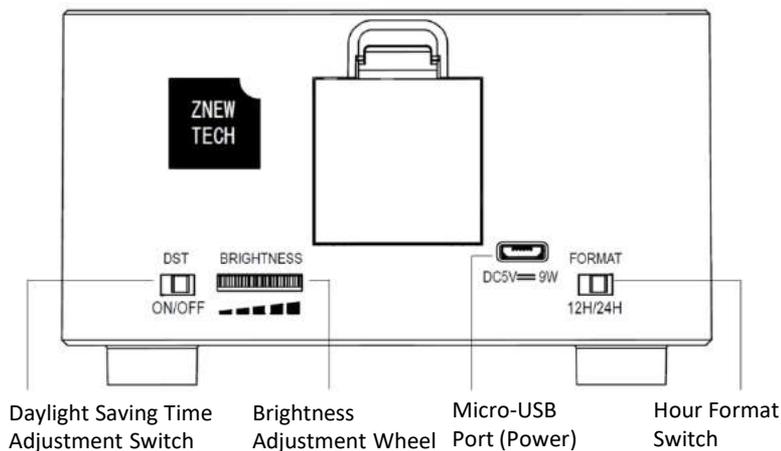

Getting Started

Connecting Echo Dot to Clock Stand and Power Adapter

1. Unplug Echo Dot power cable
2. Insert Echo Dot into Clock Stand. Make sure the Echo Dot Micro-USB port align with the cut out of the Clock Stand.
3. Open compartment cover and pull out Clock Stand's micro-USB cable
4. Plug the micro-USB cable into Echo Dot
5. Close the compartment cover
6. Plug the Echo Dot's micro-USB power cable and 9W adapter into Clock stand and then into a power outlet.

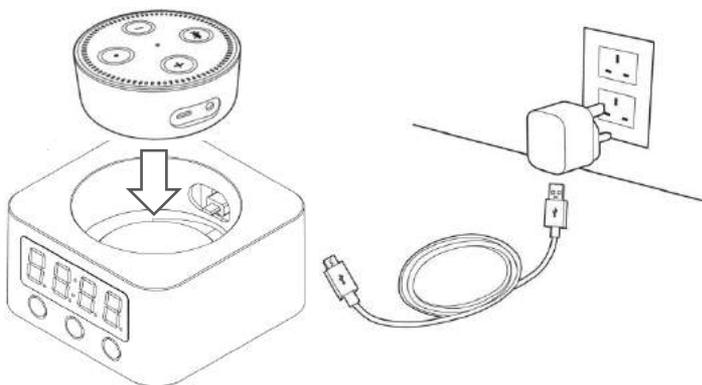

Operations

Setting Year/Month/Day

1. Press and hold **Set** for more than two seconds.
The four digits of the **year** will start to flash on the display.
2. Press **+** or **-** repeatedly to select the year, and then press **Set**.
3. Repeat step 2 to set **month** and **day**.

After setting **day**, the default time is shown on the display.
If you do not press any button for about **10 seconds** while setting the clock, clock setting mode will be canceled.


Setting Time

1. Press **Set**.
The two digits of the minute will start to flash on the display.
2. Press **+** or **-** repeatedly to set up the correct minute.
3. Press **Set** again. The two digits of the hour will start to flash.
4. Press **+** or **-** repeatedly to set up the correct hour, then press **Set**.

There is a **PM indicator dot** (shown in 12 Hour Format only) in the lower right corner. The dot on means PM.

Battery Backup

Open battery compartment cover and insert 2 new "AAA" batteries (not included). The battery will hold the DATE/TIME settings if the power is interrupted. There will be no display under battery power.

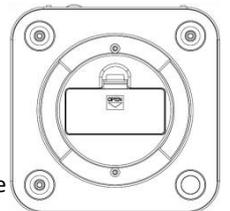

If there is no battery and the power is interrupted, the clock date/time will need to be reset.

Auto-Adjust Daylight Saving Time

Slide the DST switch to turn on or off automatic Daylight Saving Time adjustment



Brightness Adjustment

Turn the brightness control wheel to gradually adjust the brightness of the LED display.



12/24 Hour Display

Slide the **Format** switch to change hour display format.



Maintenance and Support

Replace the back up battery annually, or store the clock without a battery when not in use. If you experience any problems with this clock stand, please visit www.znewtech.com or contact support@znewtech.com.



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Please read this before operating your unit.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings.
Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Specifications

Time display

12-hour/24-hour

Power requirements

5.2V 1.8A

Dimensions

Approx. 115mm x 115mm x 70mm (4.52" x 4.52" x 2.76")

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warranty

1 Year Limited Warranty

Applies to Znewtech product

Znewtech LLC (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 1 year from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, please contact the Customer Service Department at support@znewtech.com for authorization or visit www.znewtech.com for detail information. A Return Authorization (RA) number must be issued before any product is returned to Znewtech. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 1 YEAR FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. Znewtech specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. Znewtech's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.