

Digital Column Bathroom Scale

# Step-By-Step Assembly Instructions



Znewtech

## Step 1:

Remove all packaging materials and lay down all parts on the floor as shown in the picture below

### Note:

Make sure these two ends of **stand poles** (shown in the **red circles** below) are the ones that have **SINGLE screw hole** and the single **screw hole faces down** to the floor



Scale Base

Stand Pole

Pole Connector

Stand Pole

Display

## Step 2:

Run the wire from scale base through a stand pole

### *Tip:*

*Pull the **wire** to straighten it first before inserting the **wire** into the **stand pole***



### Step 3:

Align the two screw holes on the stand pole with the two slots on the scale base, and push the stand pole into the scale base firmly.



**Note:**

Make sure this is the end of **stand pole** that has **SINGLE screw hole** and the single **screw hole faces down** to the floor

Slot on the scale base

Screw hole



## Step 4:

Run wire through the pole connector and insert the pole connector into the stand pole

**Tip:**

Align the **screw hole** on the **stand pole** with the **slot** on the **pole connector** before pushing the **pole connector** into the **stand pole** firmly



Slot on the pole connector



## Step 5:

Run the wire from scale display through a stand pole

### **Tip:**

*Pull the **wire** to straighten it first before inserting the **wire** into the **stand pole***




### **Note:**

*Make sure the single **screw hole** on the **stand pole** **faces down** to the floor*

## Step 6:

Connect two wires together

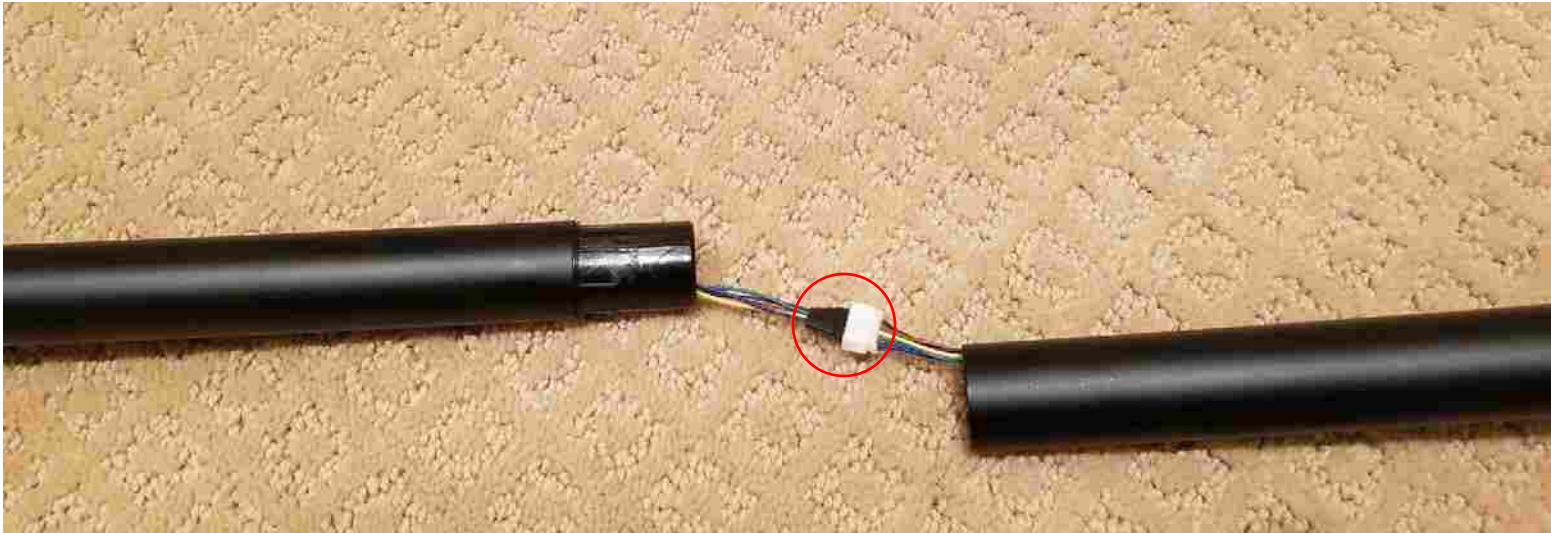

### **Tip:**

Flip one **wire connector** direction by 180 degrees if you couldn't connect two **wire connector** together



## Step 7:

Connect two stand poles together



### **Note:**

Fold the **wire** before inserting it into the **stand pole**  
Push both **stand poles** into the **pole connector** firmly





## Step 8:

Install 4 AAA batteries into the battery compartment on the bottom of scale base, and check if the display screen shows 0.0 lb




### Note:

If the **scale screen** doesn't show **0.0 lb**, please follow the steps below to troubleshoot the problem:

- 1) Uninstall **batteries**
- 2) Disconnect the **pole connector** and **stand pole**
- 3) Disconnect the **wire connectors** and wait for **15 minutes**
- 4) Re-connect the **wire connectors** and make sure the **wires** are properly connected
- 5) Install **batteries** and check if the **display screen** shows **0.0 lb**
- 6) If the above steps still doesn't work, please contact us at [support@znewtech.com](mailto:support@znewtech.com)

## Step 9:

Hold up the scale to stand-up position and fasten all 6 screws

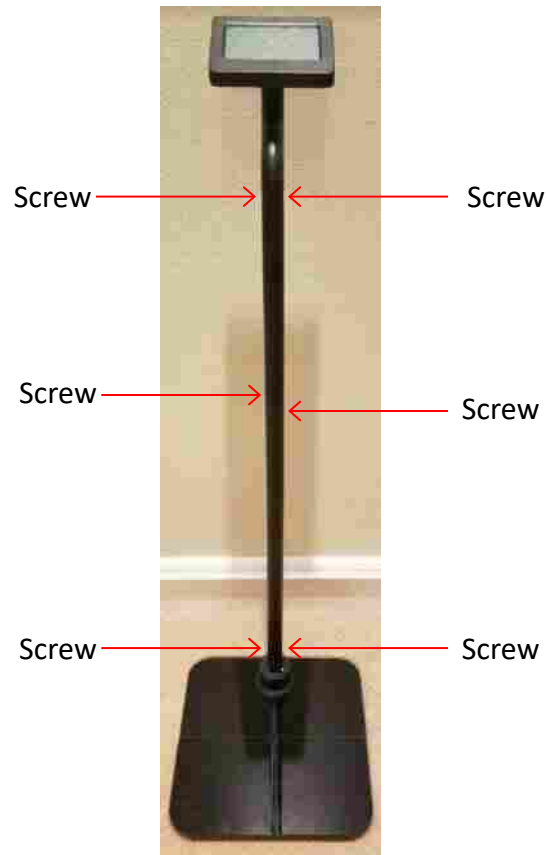

### Note:

Use the scale on a hard, level and even surface—*no carpeting*. Inconsistent and soft surfaces will cause inaccurate measurements.